

### Infrared Medium Wave Panel Heater Warm-Up Curves

**Warm-up curves** are measured from heaters running facedown in open air. The thermocouple is located in the standard location, in the thermowell located behind the coil. The curves will change with environment and thermocouple location.

The curves are also useful in determining what the potential maximum temperature and peak wavelength are for various watt density heaters.

