 


Infrared Temperature Measurement — NCIT Plus Series Accessories

Pipe Adapter:


The Pipe Adapter is used to connect the Standard or Laser Head to a 1.5 inch NPT pipe thread.

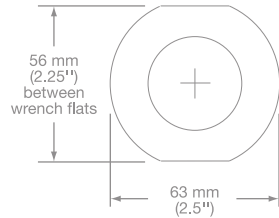

REN00206

Conduit Adapter

 
The Pipe Adapter is used to connect the Standard or Laser Head to a 1/2-inch NPT conduit fitting.

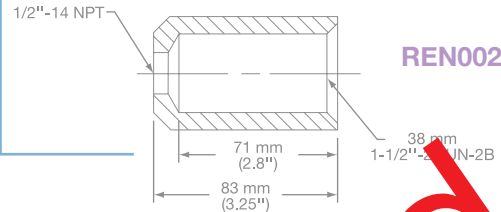

REN00205

Lens Air Purge Collar:

 The Air Purge Collar accessory is used to keep dust, moisture, airborne particles and vapors away from the lens. It may be installed before or after the bracket. Air flow should be a maximum of 1-3 cfm (0.5-1.5 liters/sec). Clean or "instrument" air is recommended to avoid contaminants from

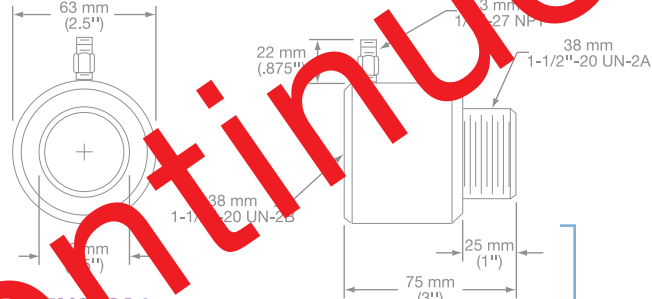

REN00204

NCIT Plus Standard Sensing Head Cables

5 conductor cables for connecting the standard sensing head to the panel meter.

REN01201	13 ft. (4m)	Regular temperature
REN01202	13 ft. (4m)	High temperature for Air/Water cooled Sensing Head
REN01203	26 ft. (8m)	Regular temperature
REN01204	26 ft. (8m)	High temperature for Air/Water cooled Sensing Head

Additional Accessories

REN00208	Fixed mounting bracket for the regular sensing head
REN00213	Adjustable mounting bracket for the regular sensing head
REN00207	Mounting nut

Used in conjunction with the Standard or Laser Sensing Head.

Ordering Information

Choose the **NCIT Plus, accessories, and/or options** desired, and order by the associated part number.

Standard lead time is stock to 3 weeks.

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov.